
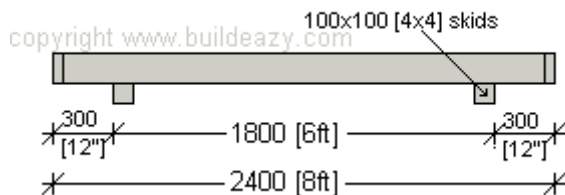


Watertown 21CCLC Program Shed Building Project

Step 1. The Floor

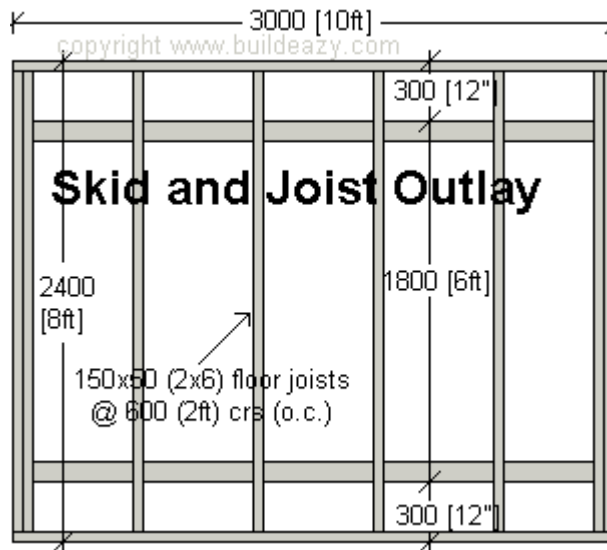

DIRECTIONS

Cut the Floor Frame to the measurements shown in the Skid and Joist Outlay plan. (above)

On level ground make up the Floor Frame – again use Skid and Joist Outlay plan. (above)

Cover the floor with 3/4 inch plywood. Nail 2 1/2 inch nails a maximum 8 inches apart on all joists.

APPLIED MATH

Perimeter of floor

Surface area of floor

Measurement (cutting)

Problem solving (200 nails 8 inches apart)